



## Installing Canon PowerShot S80 Speaker

### Tools used in this guide

- [Phillips #00 Screwdriver](#)
- [Spudger](#)



### *Step 1 - disassembly Outer Casing*

- Remove the knot on the wrist lanyard.
- Remove the battery and memory card.





### Step 2

 
- Remove all screws from sides of outer casing.
- Begin removing the screws on the bottom of the outer casing.
- Remove the rest of the screws from the outer casing.



### Step 3


- Gently pull the front cover off the camera.



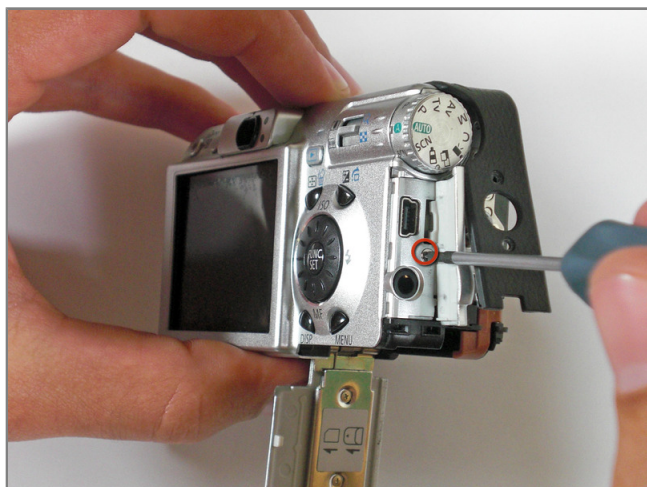

### Step 4

 - Open the "A/V Out Digital" cover slide, and remove the screw inside.
- Gently pull off the back casing.
- Remove the black "L" shaped piece of metal.

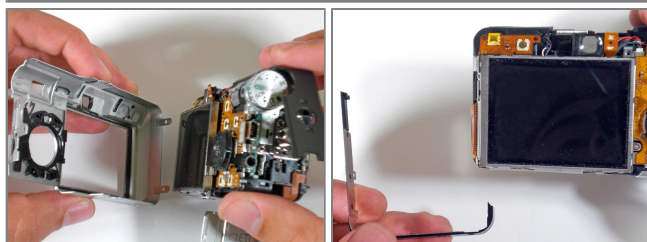

### Step 5 - Speaker

- Remove the screw and unplug the wire lead.
- Gently remove the speaker from the camera body.